

END POST WIRE WRAP


Step 5

DETAILS OF BRACE WIRE INSTALLATION

Step 6

## NOTES:

- Make a minimum of four tight wraps back around itself. Ends of the wrap to be trimmed flush.
- 2 Set staples cross-wise to the grain. Staples are to be driven tight at pull posts. All other wood post the staples shall be driven firm, but loose enought to allow lateral movement of the wire.
- 3 Approved fence fabric wire splice.
- A tension curve consists of a "U" shaped crimp in the fence wires. It has the same effect as a spring. Stretch to 50% removal of the factory crimp.

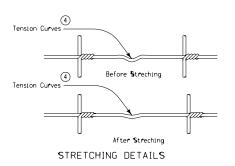

All dimensions given in millimeters unless noted.

